# NOKIA

# User Guide for downloading the latest system software to Nokia Mediamaster 9650 S

#### **1** INTRODUCTION

This document describes how to download the latest system software to your Nokia Mediamaster.

## 2 SETTINGS

- Save the Update File into a new directory/folder of your PC.
- Unzip the Update File
- Start the Download Program by opening "Flashprogrammer.exe"
- Follow the instructions on the screen:

## 3 CHOOSE A FREE COM PORT AND PRESS NEXT

9400/50 Flash Progra	mmer	
	<u>P</u> ort:	СОМ1 СОМ1 СОМ2 V
Choose CO	M port for a	communication between the PC and IRD.
Cancel		k∂ Next



4 CONNECT A SERIAL NULL MODEM CABLE BETWEEN YOUR MEDIAMASTER (IRD) AND YOUR PC



5 DISCONNECT YOUR MEDIAMASTER (IRD) FROM POWER AND PRESS NEXT

9400730 Flash Flu	gramme)
	Please disconnect the IRD from mains.
	Next

6 CONNECT YOUR MEDIAMASTER TO POWER WITHIN 10 SECONDS!

9400/50	Flash Programmer	
	Please connect the IRD to the mains within 10 seconds.	
		Cancel



7 CHOOSE THE UNZIPPED MEDIAMASTER SOFTWARE FILE (THE SW.BIN) AND PRESS OPEN.

Open							?	X
Look jn: 🔂	1.40i		•	£	<b></b>	<b>e</b> ř		
f140pp.bir			00.00					_
, File name:	× bio					12	Onen	
The Hame.						_	Open	4
Files of type:	*.bin				•		Cancel	
	□ Open as	read-only						
	SS 72 80 3							

8 PLEASE NOTE THAT YOUR CURRENT CHANNELLIST AND SETTINGS WILL BE LOST WHEN DOWNLOADING THE NEW SOFTWARE.

WARNING!		
If you proceed downlo	ading,	
all channels and settings	will be lost.	



9 CONGRATULATIONS! YOU ARE NOW DOWNLOADING THE LATEST SOFTWARE TO YOUR MEDIAMASTER

9400/50 Flash Programm	er -	
	Downloading in progress	2 %

10 IF YOU DIDN'T SUCCEED, PRESS OK AND TRY AGAIN FROM BEGINNING

10750 Flash I	Programmer					8
	co	)M-port con	nmunicatio	on failed l		
					ОК	